
















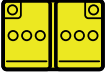






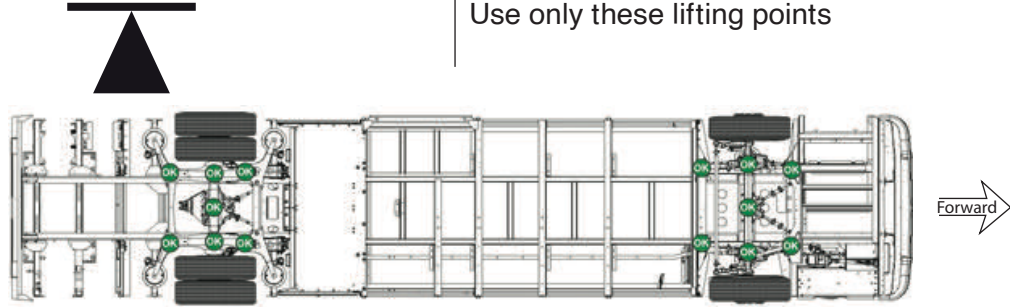

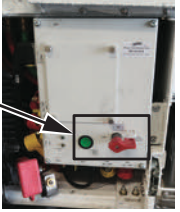
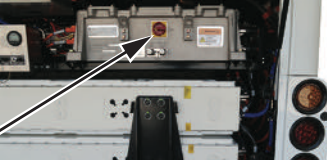


































|  |   |  |   |   |   |
|--|---|--|---|---|---|
| <br>Electric propulsion   | <br>Plug-in Charge Port  | <br>High-voltage Li-Ion battery | <br>High-voltage component | <br>High-voltage power cable | <br>Disconnect high-voltage    |
| <br>Low-voltage battery   | <br>Emergency exit       | <br>Break to obtain access      | <br>Emergency door         | <br>Auto fire suppression    | <br>Air conditioning component |
| <br>Suspension Air Spring | <br>Lifting point        | <br>Height control              | <br>Seat adjustment        | <br>Air tank                 | <br>Steering Wheel Control     |
| <br>Overhead Charging     | <br>Inductive Charge Pad |  | ID No.  | Version No.   | Page No.  |

| 1. Identification / Recognition  |  |
|--|--|
|   | Electric bus with plug in charging and optional high voltage inductive or overhead conductive charging   |
| 2. Immobilisation / Stabilisation / Lifting  |  |
|   | Bus height control in driver cabin   |
|   | Steering wheel, tilt control   |
|   | Seat height adjustment in driver cabin   |
|   | Use only these lifting points  |
| 3. Disable direct hazards / Safety regulations   |  |
|  <p>When circumstances allow, park the bus in a safe location, set the parking brake, and select "neutral" on the shift selector.</p> | <p>Shutdown high voltage (available in two locations)</p> <p>Use 12/24V switch to disable HV</p>   <p>High-Voltage Disconnect Switch</p> |
| 4. Access to the occupants   |  |
|   | Two door exits   |
|   | Two roof exit  |
|   | Break these windows to obtain access   |

| 5. Stored Energy / Liquids / Solids   |   |   |   |
|---|---|---|---|
|    |    |    |   |
|   |    |    |   |
|    |    | Plug-in Charge Port   |   |
|    |    | Overhead Charging   |   |
|    |    | Inductive Charge Pad  |   |
|    |   |    |   |
|   |   |    |   |
|   |  |  |   |
| 6. In case of fire  |   |   |   |
|  |  |  |  |
|  |  |  |  |
| 7. In case of submersion  |   |   |   |
|  | Follow heading 3. Disable direct hazards / safety regulations once out of the water   |   |   |
| 8. Towing / Transportation / Storage  |   |   |   |
|  |  | Check battery temperature<br>Remove driveshaft/axle shafts for towing                 |   |

**THIS PAGE  
INTENTIONALLY  
LEFT BLANK**