 



# EMERGENCY MANUAL SHUTDOWN

For GILLIG 5-Tank CNG Bus


- 1 Turn master run control to “OFF” and set parking brake

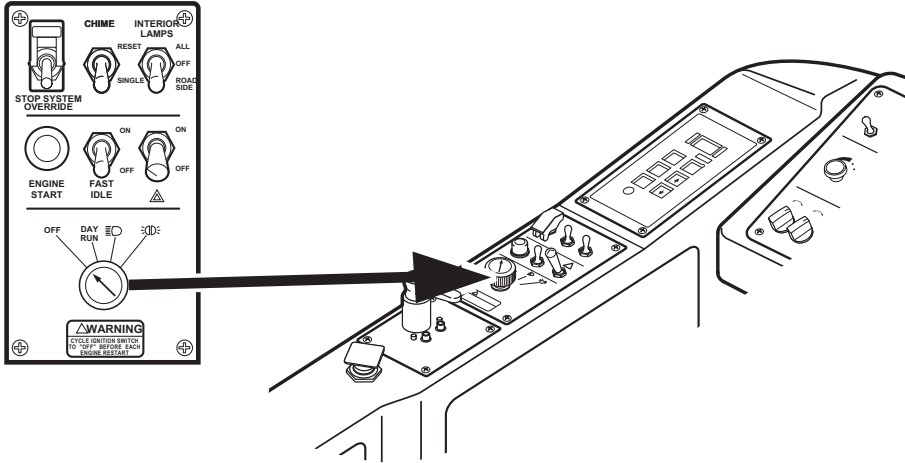

 - 2 Turn off battery disconnect switch (Streetside, Front of Bus)

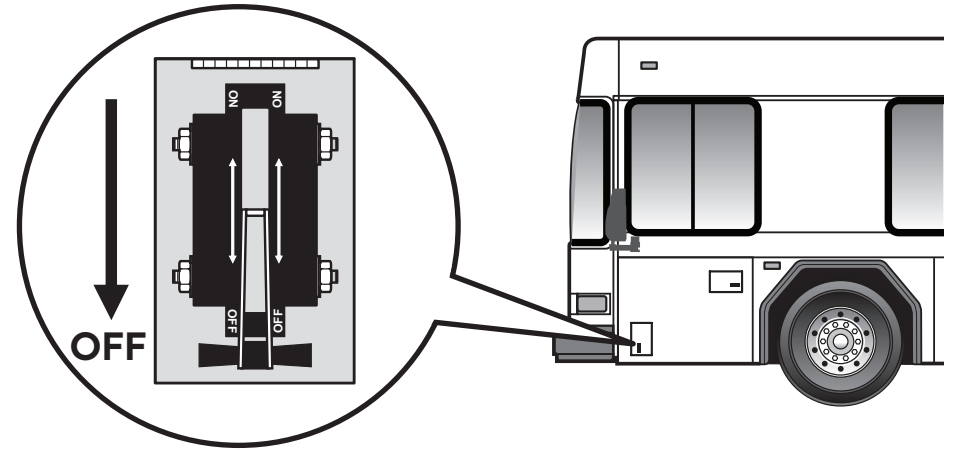

 - 3 Shut off main fuel supply to engine at 1/4-turn valve (Curbside, Rear of Bus)

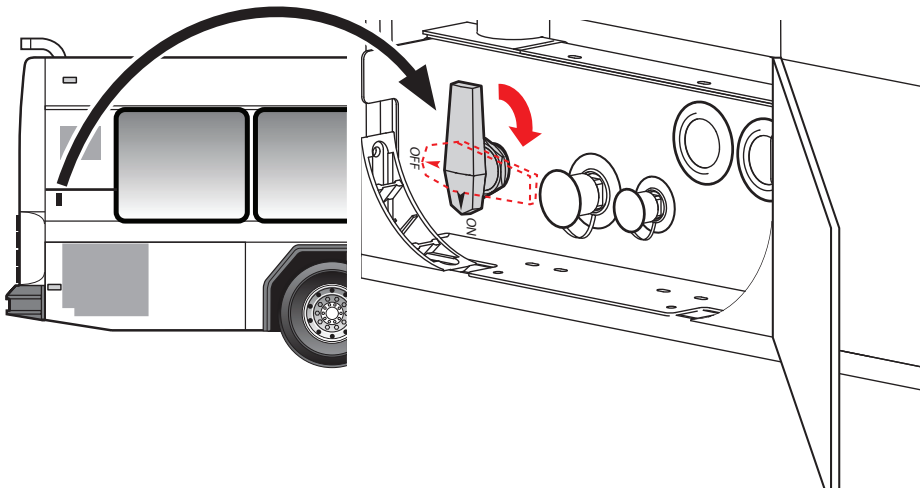

- 4 Inform emergency personnel!  
(See the reverse side of this card)

**GILLIG**

51-82371-003  
©2020 GILLIG LLC

# PRECAUTIONS

For GILLIG 5-Tank CNG Bus



## WARNING



Storage pressure of CNG (Compressed Natural Gas) is up to 4,000 psi. Avoid cutting all fuel supply piping.

See reverse of this card for system shutdown information.



## WARNING



Beware of any fire, sparks, or electrostatic charges before approaching the vehicle.



## WARNING



 
Gas may be present in fuel lines after all valves have been turned off.



## WARNING



In the event of a fire: All tanks are equipped with thermal activated pressure relief devices that will vent fuel stored in the tanks. These devices vent fuel upward.

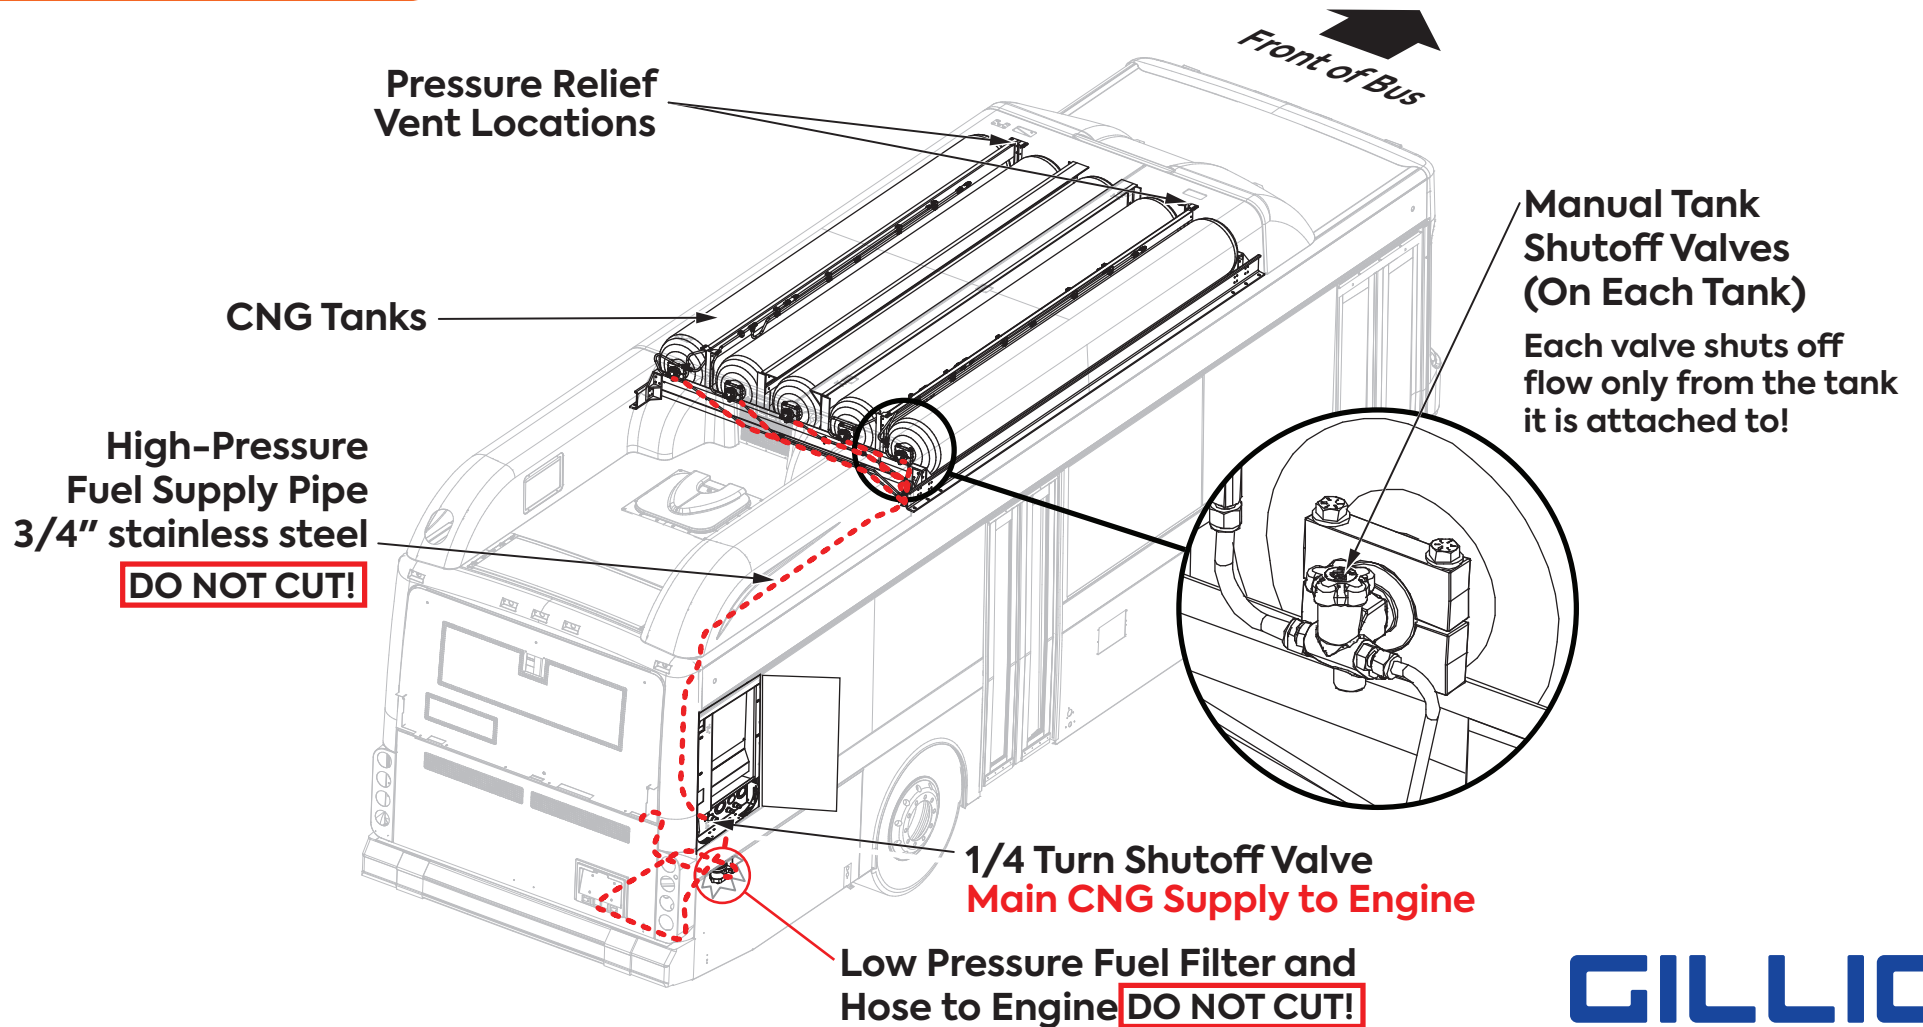

**GILLIG**

51-82371-003  
©2020 GILLIG LLC