


 
 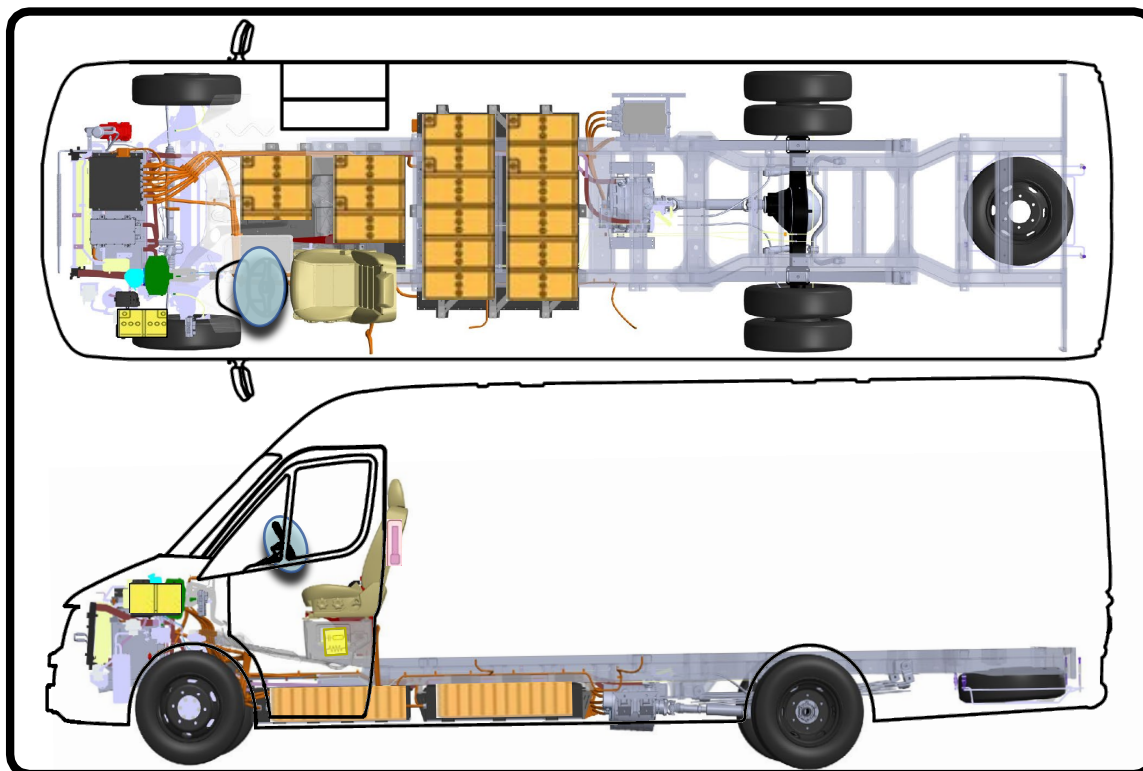





2018-21

*(continued)***EXTRICATION INFORMATION****LEGEND**

 Airbag	 SRS Control Unit	 12V Battery
 Seatbelt Pretension	 High-Voltage Battery	

For towing and post-incident instructions, see the **POST-INCIDENT** section.



## VEHICLE INFORMATION

### IMMOBILIZE VEHICLE

1. Chock the wheels.
2. Set parking brake. (Hand brake)
3. Place vehicle into neutral. (gear selector)
4. Release exterior exit handle.

### DISABLE VEHICLE

Determine if vehicle is ON.

- Vehicle is ON if dash screen is illuminated.
- Vehicle is drivable if "Ready" is green and motor status is in "Run" mode.



Dash Screen

### PRIMARY PROCEDURE

1. Turn the ignition key to the off position
2. Remove key from ignition
3. Turn off 12V red switch.




Handbrake





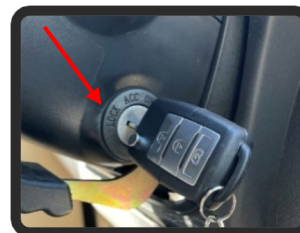

12V Switch ON

12V Switch OFF



Ignition Key OFF

### WARNINGS

-  NEVER cut, breach, or touch high voltage components or cabling. Doing so could result in serious injury or death.
-  The high voltage system may remain powered for up to 1 minute after the vehicle is shut off.
-  The SRS system (airbags, etc.) may remain powered for up to 1 minute after disabling.
-  Lack of engine noise does not mean vehicle is OFF. Silent movement or instant restart capability exists until vehicle is fully shut down.